


# AIRSTREAM™

## Keyless Entry Key Fob

During the 1995 model year the keyless entry system was changed from the "key pad" type to a system using a key fob transmitter as shown to the right. As the operating characteristics of this system are unique when compared to other remote transmitter systems, please familiarize yourself with the operation as detailed below.

- Pad 1. **LOCK** - Pressing this keypad locks the main entry door and the exterior compartment doors. Please note that locking is not instantaneous....you must hold the button down for a second or so - until you hear the door lock.
- Pad 2. **UNLOCK** - This pad unlocks the main entry door and exterior compartment doors. Again, action is not instantaneous....you must hold the button down for a second or so.
- Pad 3. **LIGHTS** - This pad controls the patio and step lights. Press it to turn the lights on. Press it again to turn them off.

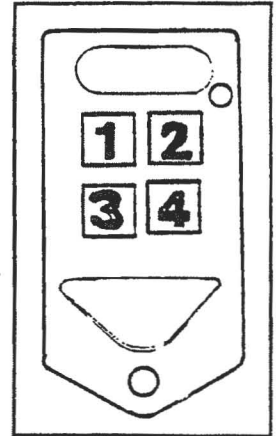

Please note that when you use the keypad to turn the patio lights ON you must also use the keypad to turn them OFF. The same goes for the switch inside the door....if you turn the lights on with this switch, you must use the same switch to turn them off. You cannot turn the lights on with the keypad and off with the switch.

- Pad 4. **Non-functional.**