

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should be followed, including the following:

1. Read all instructions.
2. Close supervision is necessary when any appliance is used by, or near children.
3. Make sure control dial is OFF before putting on parts and before cleaning.
4. Do not operate any appliance after it has been dropped or damaged in any manner. Return appliance to any Authorized NuTone Service facility for examination, repair, or adjustment.*

SAVE THESE INSTRUCTIONS

* In all instances when any appliance has been dropped or damaged, all charges required by the NuTone Authorized Service Center will be the sole responsibility of the customer.

OPERATION:

1. Turn power unit switch to position 3.
2. Be sure knife is clean and dry.
3. Place the heel of the knife blade into the guide slot next to the sharpening stone (left or right). Hold the knife firmly by the handle and draw the knife slowly toward you with the cutting edge of the knife in contact with the side of the stone. Allow the weight of the knife and the guide slot to apply the necessary pressure and positioning.
4. Repeat step 3 for the other side of the knife.
5. Repeat steps 3 and 4, alternating left and right side of stone per knife stroke, until the knife is sharp. (Figure 3)

CLEANING:

About once a year, the knife sharpener should be cleaned to remove grit and metal particles which may have fallen beneath the sharpening stone. To remove the cover, remove the four screws on the bottom of the sharpener. Remove the cover and clean out the deposits. Do not oil any part of your sharpener. Any oil put into the knife sharpener may destroy the rubber grommet that drives the sharpening stone.

The outside cover may be washed with mild soap and water. **DO NOT** immerse the entire unit in water. There is a factory installed lubricant in the drive shaft that could be dissolved by soaking in a detergent water. **DO NOT** wash unit in the automatic dishwasher.

MADISON & RED BANK ROADS
CINCINNATI, OHIO 45227


Printed in U.S.A. Part No. 66313 5/75

INSTALLATION & OPERATION

Food Center Knife Sharpener


MODEL 274

 Use with Model 250 Food Center Power Unit

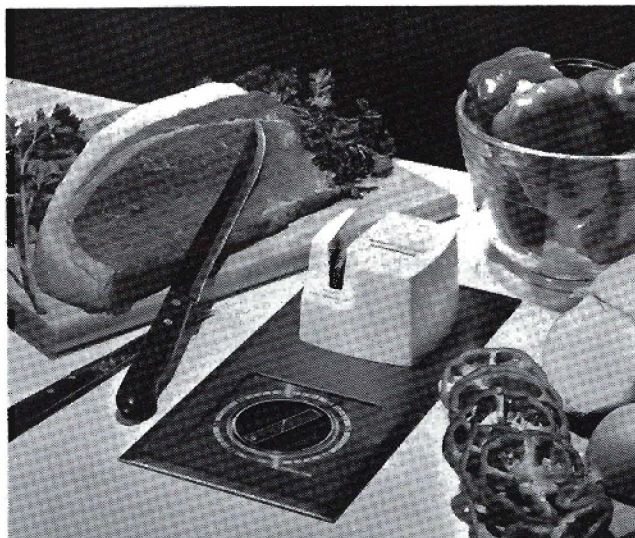

CAUTION

 This Knife Sharpener is designed to do excellent sharpening of all straight edge knives. However, do not attempt to sharpen knives with an irregular edge such as Serrated, Hollow Edges, Scooped, Fluted or Corrugated.

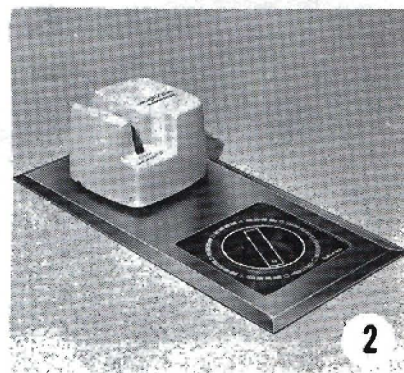

1. Position knife sharpener in base plate.
2. Turn counterclockwise until sharpener is firmly secured in place.
3. Be sure grinding wheel is to the left of sharpener and the stone is lined up parallel to the long side of base plate.

