


To remove used cartridge

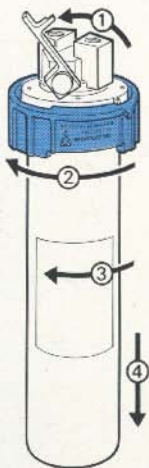

1. Shut off water by lifting valve handle. Move counterclockwise as far as possible.
2. Turn colored ring all the way to the left. Ring will drop about $\frac{1}{2}$ ".
3. Lift cartridge slightly and turn it further to the left until it can be disengaged.
4. Lower cartridge to disengage it from ring. Discard used cartridge.

To install new cartridge



1. With colored ring in lowered position (turned all the way to the left) orient lug on cartridge with cut-out under label on ring.
2. Insert cartridge straight up into ring as far as it will go. Holding colored ring steady, turn cartridge as far to the right as possible.
3. Then turn colored ring far to right to drive cartridge up into head.
4. To lock ring in place and turn water on, move valve handle down. Be sure handle leg engages ring locking-lug.